

## Attach a Camera to an EQ mount

An EQ mount usually equipped with a Vixen-type saddle. Therefore a Vixen-type dovetail plate is needed to attach a camera to the mount. It is also recommended to have a dovetail plate with a mounting slot so you can move the camera back and forth.

Here is an example to use an iOptron dovetail plate [#8422-178](#) to attach a camera onto an iEQ30 E mount. In addition to the dovetail plate, a 1/4"-20 socket head cap screw, 1/2" to 5/8" long in length which depends on the mounting hole depth on your camera body, is also needed.

